


# Headlamp

**For best results: Charge the Headlamp using a micro USB cable until the indicator light turns from RED to GREEN.**

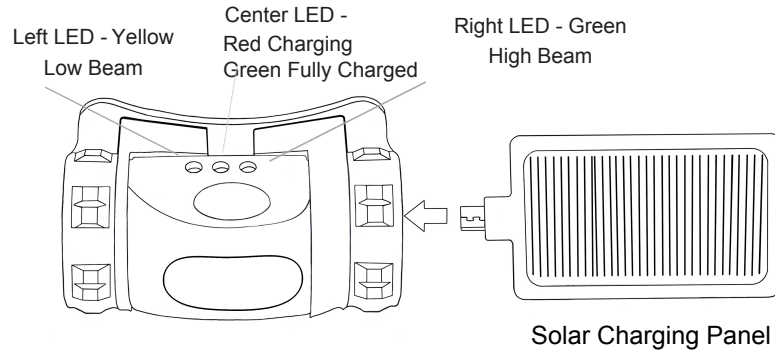

If the Indicator Blinks RED, the Headlamp needs to be charged.

- 1st Click = Low Beam
- 2nd Click = High Beam

## **Charge the Hybridlight Headlamp using a standard Micro USB cable:**

1. Plug the cable into the micro USB port.
2. Plug the other end of the cable into an appropriate A/C or D/C power source.
3. The LED on the Headlamp will be red while charging. Green when fully charged.

## **Charge the HYBRIDLIGHT™ Solar Headlamp using Natural Light:**

1. Be certain the Headlamp is in the “off” position.
2. Place the Solar Charging Panel into micro USB slot on side of the Headlamp, then place Headlamp in natural sunlight. The brighter the light source the faster the Headlamp will recharge.
3. The LED on the Headlamp will be RED while charging